



MV = MASTER VOLUME  
 NT = NECK TONE  
 BT = MID/BRIDGE TONE  
 + = SERIES CONNECTION  
 / = PARALLEL CONNECTION  
 ( ) = INDICATES PAIRED COILS

5 WAY SWITCH POSITION,					SWITCH UP
					← 5 WAY SWITCH POSITION
MV NT	MV NT+BT	MV BT	MV BT	MV BT	← CONTROL
					← NECK (A)
					← MIDDLE (B)
					← BRIDGE (C)
	A/B		B/C		← CONNECTION

5 WAY SWITCH POSITIONS,					SWITCH DOWN
					← 5 WAY SWITCH POSITION
MV NT	MV NT+BT	MV NT+BT	MV BT	MV BT	CONTROL
					← NECK (A)
					← MIDDLE (B)
					← BRIDGE (C)
A+B	(A+C)/B	(A+B)/C	B/C		← CONNECTION

	PICKUP IS ON	A PICKUP (NECK)
	PICKUP IS OFF	B PICKUP (MIDDLE)
		C PICKUP (BRIDGE)