


SWITCH & CONTROL FUNCTION

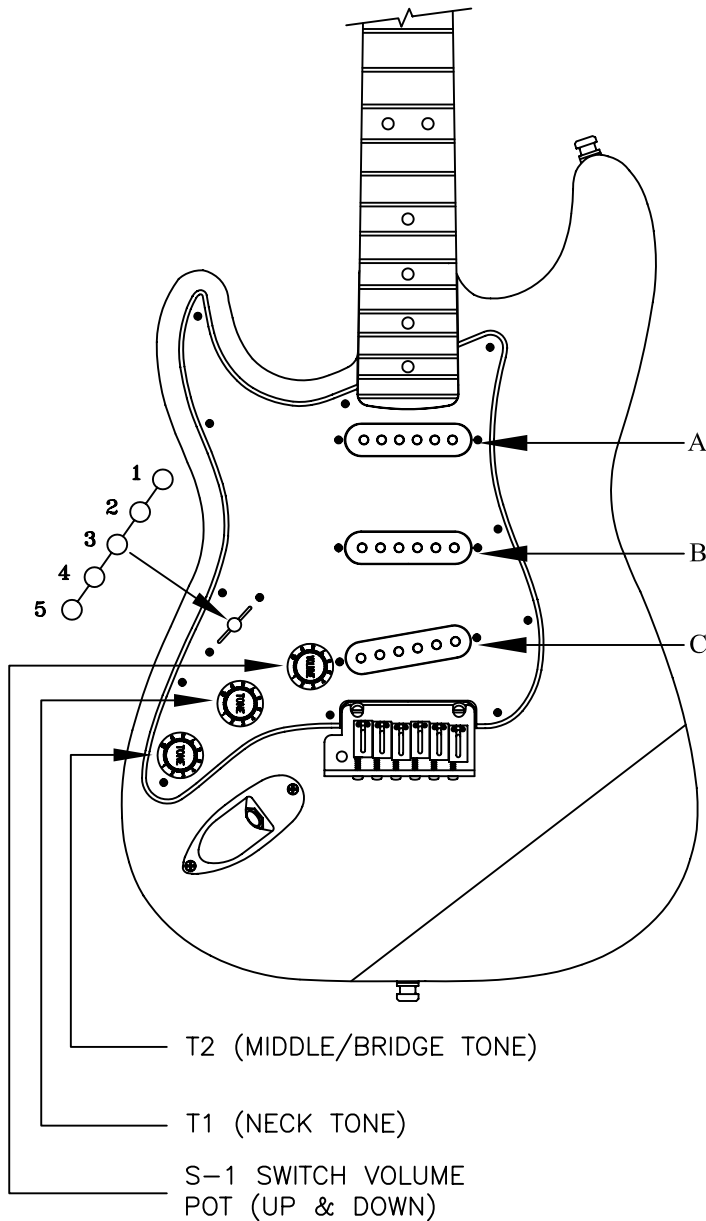

MV = MASTER VOLUME  
 T1 = NECK TONE  
 T2 = MID/BRIDGE TONE  
 + = SERIES CONNECTION  
 = PARALLEL CONNECTION  
 SC = SPECIALS CAPACITOR

5 WAY SW POSITIONS, S-1 SWITCH UP

POSITION	CONTROL	NECK (A)	MIDDLE (B)	BRIDGE (C)	CONNECTION
	MV T1				
	MV T1+T2				A/B
	MV T2				B/C
	MV T2				
	MV T2				

5 WAY SW POSITIONS, S-1 SWITCH DOWN

POSITION	CONTROL	NECK (A)	MIDDLE (B)	BRIDGE (C)	CONNECTION
	MV T1				A+B
	MV T1+T2				(A/SC) + B
	MV T2				(A/C) + B
	MV T2				B + (C/SC)
	MV T2				B+C

	PICKUP IS ON
	PICKUP IS OFF
<i>A</i>	PICKUP (NECK)
<i>B</i>	PICKUP (MIDDLE)
<i>C</i>	PICKUP (BRIDGE)