


SWITCH & CONTROL FUNCTION

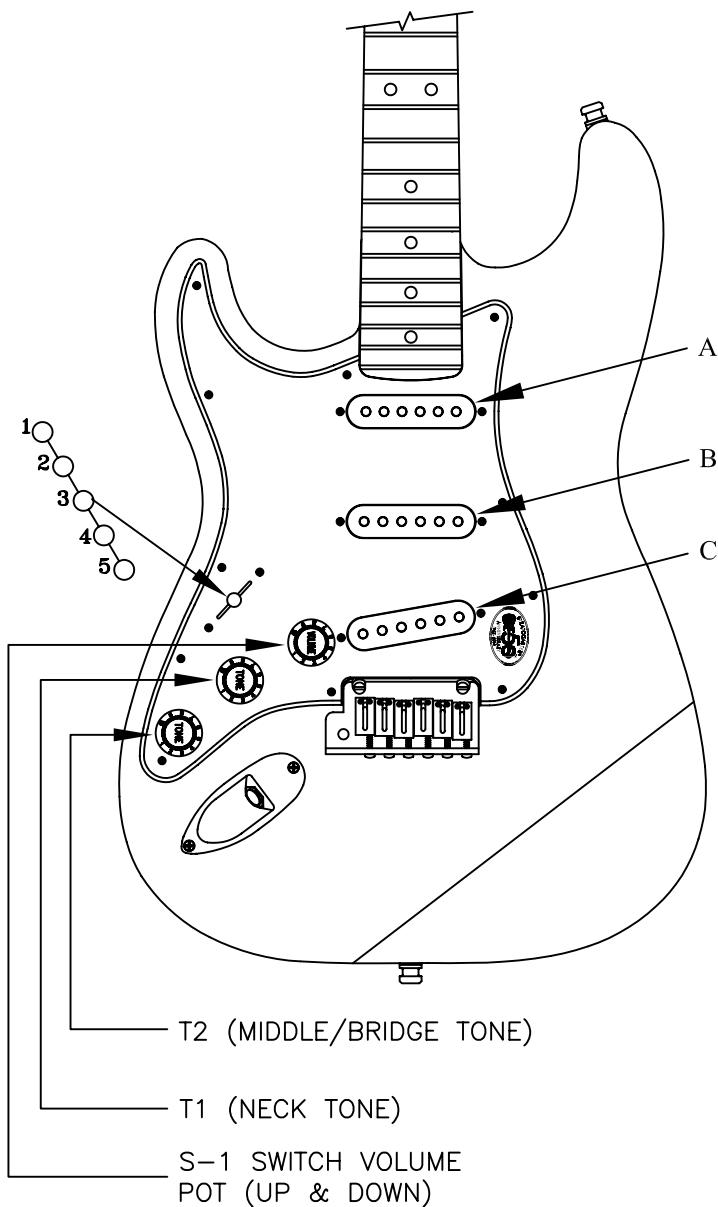

5 WAY SW POSITIONS, S-1 SWITCH UP

POSITION	CONTROL	NECK (A)	MIDDLE (B)	BRIDGE (C)	CONNECTION
1	MV T1	●	○	○	
2	MV T1+T2	●	●	○	A/B
3	MV T2	○	●	○	
4	MV T2	○	○	●	B/C
5	MV T2	○	○	●	

5 WAY SW POSITIONS, S-1 SWITCH DOWN

POSITION	CONTROL	NECK (A)	MIDDLE (B)	BRIDGE (C)	CONNECTION
1	MV T1	○	○	○	A+B
2	MV T1+T2	○	○	○	(A/SC) + B
3	MV T2	○	○	○	(A/C) + B
4	MV T2	○	○	○	B + (C/SC)
5	MV T2	○	○	○	B+C

●	PICKUP IS ON
○	PICKUP IS OFF
A	PICKUP (NECK)
B	PICKUP (MIDDLE)
C	PICKUP (BRIDGE)

MV = MASTER VOLUME
 T1 = NECK TONE
 T2 = MID/BRIDGE TONE
 + = SERIES CONNECTION
 / = PARALLEL CONNECTION
 SC = SPECIALS CAPACITOR

