

# '72 TELECASTER® DELUXE, 013-7702

## SWITCH & CONTROL FUNCTION

3 WAY SWITCH POSITION			
3 ●—○—○	2 ○—●—○	1 ○—○—●	← 3 WAY SWITCH POSITION
■	■	□	← NECK PICKUP
□	■	■	← BRIDGE PICKUP
■	PICKUP IS ON		□ PICKUP IS OFF

