


AMERICAN STRATOCASTER®, HH, HT, 0117130, R/W

SWITCH & CONTROL FUNCTION

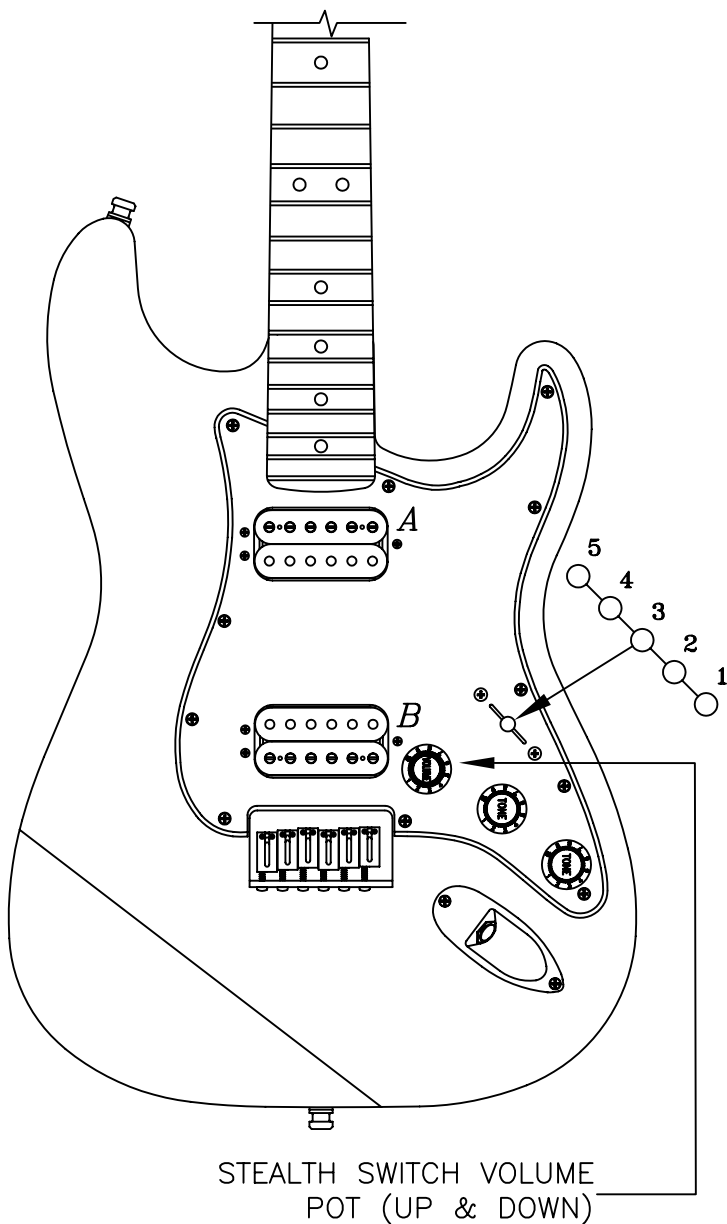

5 WAY SW POSITIONS, STEALTH SW UP					
5	4	3	2	1	POSITION
MV NT	MV NT	MV NT+BT	MV BT	MV BT	CONTROL
					← NECK PICKUP (A)
SER	INS	SER			
					← BRIDGE PICKUP (B)
		SER	INS	SER	

5 WAY SW POSITIONS, STEALTH SW DOWN					
5	4	3	2	1	POSITION
MV NT	MV NT	MV NT+BT	MV BT	MV BT	CONTROL
					← NECK PICKUP (A)
PAR					
					← BRIDGE PICKUP (B)
				PAR	

MV = MASTER VOLUME
 NT = NECK TONE
 BT = MID/BRIDGE TONE
 SER = COIL PAIR IN SERIES
 PAR = COIL PAIR IN PARALLEL
 INS = INSIDE COILS IN PARALLEL,
 SERIES WITH OUTSIDE COIL

	PICKUP IS ON
	PICKUP IS OFF
<i>A</i>	PICKUP (NECK)
<i>B</i>	PICKUP (MIDDLE)

INDICATES POSITION
 OF 5 WAY SWITCH